

2016 CE Electronic Lock for HS and FB Safe Models

HOW TO OPEN THE SAFE FOR THE FIRST TIME (FACTORY SET CODE: *1234 or *4560#)

- STEP 1: PRESS THE "*" BUTTON (" CODE " ON SCREEN)
- STEP 2 : PRESS IN THE FACTORY SET CODE
- STEP 3 : PRESS THE "#" BUTTON ("OPEN" ON SCREEN)
- STEP 4: TURN THE SAFE HANDLE OR TURN THE KEY TO OPEN THE SAFE.

TO CHANGE THE MASTER CODE

(ALWAYS PERFORM THIS PROCEDURE WITH THE DOOR OPEN)

- STEP 1: PRESS THE M BUTTON (BLACK OR RED) LOCATED ON THE INSIDE DOOR PANEL ("ENTEACD" on screen)
- STEP 2 : ENTER NEW PERSONAL CODE 4-8 DIGITS LONG
- STEP 3: PRESS THE "#" BUTTON ("SUCCESS" ON SCREEN)

***Just a moment ***

PLEASE KINDLY TRY THE NEW PERSONAL CODE ONCE AGAIN WITH THE DOOR OPEN BEFORE CLOSING THE DOOR.

HOW TO SET AND CHANGE ADDITIONAL USER CODES

(NOTE: YOU MUST KNOW THE MASTER CODE TO SET ADDITIONAL USER CODES)

- STEP 1: PRESS THE "*" BUTTON("CODE" ON SCREEN)
- STEP 2: PRESS THE "#" BUTTON ("ENTER CODE ON SCREEN) STEP 3: PRESS IN THE MASTER CODE
- STEP 4: Press THE "#" BUTTON ("0-CHANGE " ON SCREEN)
- STEP 5: PRESS THE NUMBER "1" BUTTON ("CN-1" ON SCREEN).
- STEP 6: PRESS THE USER NUMBER YOU WANT TO SET OR CHANGE USER NUMBERS **2 THRU 5**
("ENTERCD " on screen)
- STEP 7: PRESS IN THE NEW PASSWORD (4-8 DIGITS LONG)
- STEP 8: PRESS THE "#" BUTTON ("RECODE" ON SCREEN)
- STEP 9: PRESS IN THE NEW PASSWORD AGAIN
- STEP 10: PRESS THE "#" BUTTON ("SUCCESS" ON SCREEN)

TO DELETE A USER PASSWORD

STEP 1: PRESS THE "*" BUTTON ("CODE" ON SCREEN)

STEP 2: PRESS THE "#" BUTTON ("ENTERCD" ON SCREEN)

STEP 3: PRESS IN THE MASTER CODE

STEP 4: PRESS THE "#" BUTTON ("0-CHANGE" ON SCREEN)

STEP 5: PRESS THE NUMBER "2" BUTTON ("DN-2345" ON SCREEN)

STEP 6: PRESS THE USER NUMBER YOU WANT TO DELETE 2-5 ("1-Y 0-N" ON SCREEN)

STEP 7: PRESS THE NUMBER "1" BUTTON TO CONFIRM YOU WANT TO DELETE

("SUCCESS" ON SCREEN)

NOTE: IF YOU MAKE A MISTAKE SIMPLY PRESS "0" TO CANCEL YOUR ENTRY

HOW TO CHANGE DISPLAY MODE

STEP 1: PRESS THE "*" BUTTON ("CODE" ON SCREEN) STEP

2: PRESS THE "#" BUTTON ("ENTERCD" ON SCREEN) STEP

3: PRESS IN THE MASTER CODE

STEP 4: PRESS THE "#" BUTTON

STEP 5: PRESS THE NUMBER "7" BUTTON ("DSP HIDE" ON SCREEN).

NOTE: 1) AFTER PRESSING THE NUMBER "7" BUTTON, ALL PASSWORDS WILL SHOW AS "*****" ON SCREEN.

2) TO CHANGE IT BACK, REPEAT THE SAME STEPS!

THE TIME FOR CHANGING BATTERY

1. THE NUMBERS ON THE SCREEN MAY NOT BE CLEAR!

2. DOOR MAY NOT OPEN IN SPITE OF EXACT CODE PRESSED!

LOCK OUT MODE

IF YOU PUT IN THE WRONG CODE THREE TIMES, THE SAFE WILL GO INTO "LOCK OUT MODE."

("HOLD" DISPLAYED ON SCREEN)

IF THIS HAPPENS WAIT 3 MINUTES OR UNTIL THE LOCK STOPS BEEPING AND THEN YOU CAN ATTEMPT TO OPEN AGAIN.

(IF YOU REMOVE THE BATTERIES WHILE IT IS IN "LOCK OUT MODE" THE TIME WILL RESET AGAIN WHEN NEW BATTERIES ARE INSERTED.)