

Gun Safe E Lock Instructions

AP8111 Electronic Lock Instructions
User Manual


OPENING THE DOOR

1. Enter valid digit code, then press # button.
 - When the valid code is entered, the lock will beep twice and the green LED turns on.
 - When an invalid code is entered, the lock will keep beeping and the yellow LED flashes.
2. Turn handle and pull door open.
 - There are two sets of user codes. They have the same function and equal authority.
 - > 1st User Code – Factory set to 168
 - > 2nd User Code – Factory set to 12345678
 - WRONG TRY PENALTY – Entry of four (3) consecutive invalid codes starts a 15 minute lock out. During lock out, key pad will not respond to any operation.

CHANGING THE 1ST USER CODE

Always perform the operation with the door open.

1. Press the “reset” button, the lock will beep twice and the yellow LED turns on.
 - The “reset” button is a red or green colored button located on the back cover or the side frame (hinge side) of the door or inside of the lower back cover of the door.
2. Enter your new digit code (1-8 digits), then press * button.
3. Test lock operation several times before closing the door.

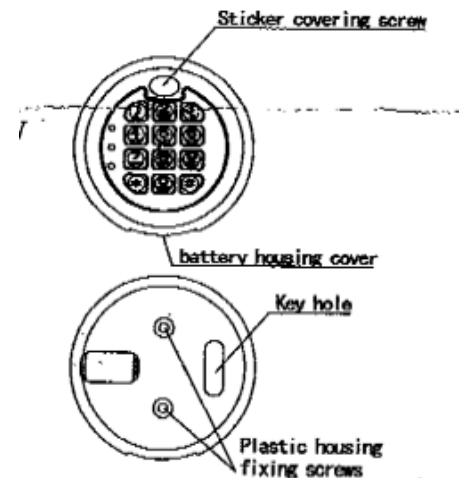

CHANGING THE 2ND USER CODE

Always perform the operation with the door open.

1. Enter “00” on keypad, and then press the “reset” button.
 - The lock will beep twice and the yellow LED turns on.
2. Enter your new digit code (1-8 digits), then press * button.
3. Test lock operation several times before closing the door.

CHANGING THE BATTERY

1. The red light LED indicates low battery.
2. Remove the battery cover under the keypad housing.
3. Replace the battery (Please, use 9V alkaline battery).

EMERGENCY OVERRIDE KEY

If you lost your code or the lock is out of order, you may use mechanical override key to open the safe as follows (if you think lock is out of order, please, try changing the battery first):

1. Take off the sticker on the keypad and you can find the screw.
2. Unscrew it and take apart the keypad from the plastic housing.

For some models, you can see the keyhole on the right side inside the plastic case. Input the key and turn the key and turn safe handle, the door will be opened. After opening the door, please set the code and take out the key.

For some models, you cannot see the keyhole. Unscrew the two screws, which hold the plastic case to the safe. You will see the keyhole after taking off the plastic housing.

**WARNING: DO NOT PLACE THE EMERGENCY KEY INSIDE THE SAFE.
PUT THEM ASIDE IN ANOTHER SECURE PLACE.**