 


EL DEPOSIT SAFES OPERATION MANUAL

for DP25EL, DP3350EL ,DP450,DP600EL, DP2775EL electronic LCD display deposit safes

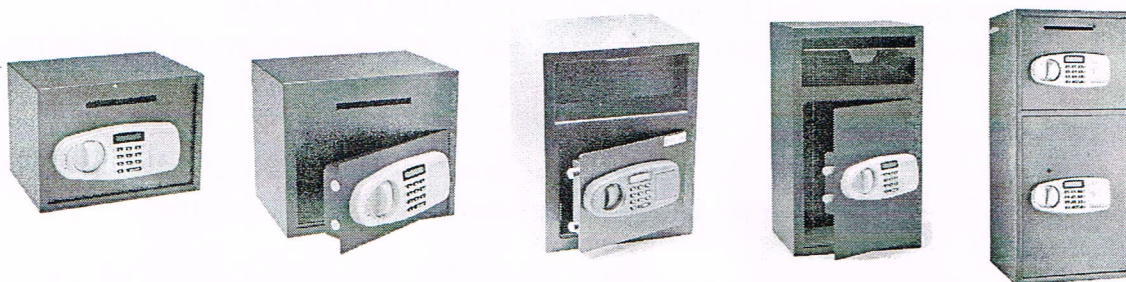

Product description:

This product is designed for moderate security risks in domestic premises and is not fire resistant. Open the packing , you will find a user manual plastic bag included 2 override keys. Do not store override keys in the safe. Read the manual carefully before you install safe.

Installation:


Choose a location where the unit can be bolted to both wall and floor as security will be much higher if it is fixed to two surfaces. Wall fixing must always be to a solid wall, not a stud wall.

Preparation for use:

Use the override key to open the safe

To open the door of the safe for the first time, remove the battery cover plate (d)(see diagram 1). You will find the keyhole, Insert the override key and turn anti-clockwise to the end. Do not release the key. Meanwhile use your another hand to turn the knob clockwise. Then turn knob to open the safe .then take off the key and keep it. This will manually open your safe.

To install the batteries, remove the battery cover plate and install the four batteries. Ensure the + and - positions are correct. The display (e) will scan the status of the electronic system automatically. If it is in order the display will show "good".

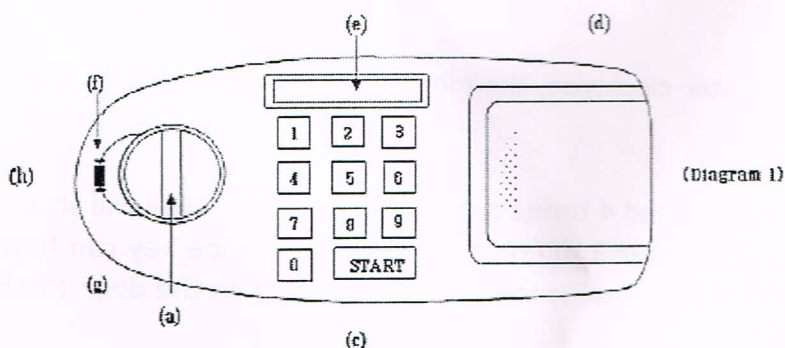

Programming the codes: (6 digits)

The safe can be programmed with two sets of codes. For your safety, after opening the safe and installing the batteries, you should program two sets of your new codes to take place of two sets


of factory-preset codes. The factory-preset codes : 123456, 888888

Programming the user code: Red button > START > enter new code

- A. Press the red button(b)(see diagram 2), then release it and display on the panel will show "-----"
- B. Press "START" immediately.
- C. Now press your 6 bytes numbers that you wish to use as a new user code. The display will show "IN" and your inputting numbers. It means that the new user code is confirmed.

Programming the master code: START > enter new code > Red button

- A. Press the "START" button. The display will show "-----".
- B. Now input your new 6 bytes number
- C. Press the red button inside (b) (see diagram 2). The display will show "IN". It means that new master code is confirmed.

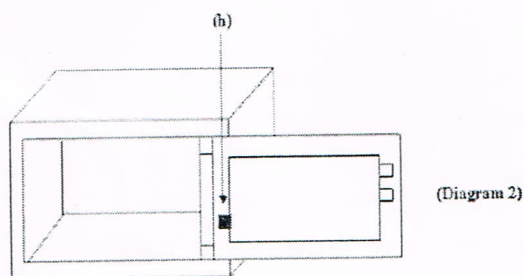

Opening the safe with the codes: (6 digits)

To open the door of the safe, press the button "START", the display on the panel will show "-----", then input the user codes or master codes. while the green light (f) will be on with the display showing "OPEN", turn the knob to open safe within 4 seconds. If you do not want the display to show your codes when you open the safe, just press the button "START" twice at the first time of pressing and other steps are the same.

Close the safe:

Close the door, turn the knob counter-clockwise, the mechanism will automatically lock the safe.

Tampering Proof :

If the incorrect combination code is used 4 times consecutively, the display will show "ERROR" and the system cannot be entered until after 3 minutes delay. The override key can however be used to open the door during this three minutes. If the key is used to open the door, the buzzer can be cleared by pressing the red button.

Low battery warning and Battery replacement: . If the batteries are low, the display will show "LOBAT", AND YOU SHOULD REPLACE THE BATTERIES.

Override key:

Use the override key to open the safe. If you lose your key, find the key number on the surface of lock or a sticky label behind the battery compartment, then contact the dealer for a duplicate.

Do not keep the key in your safe!