

# Pistol Box Instructions

**Opening your safe for the first time:** Use the override key by inserting into the key hole and counter rotate.

**Using the push button keypad:** With the safe door open, look for the battery cover located underneath the keypad inside the safe. Push the tab and remove battery cover to locate battery compartment. Keypad takes 4 AA batteries.

**Factory Code:** Enter each button once from left to right. (Left, Middle, Right) Door will open automatically after pressing the third button.

**Setting the User Code (3-8 digits long):** The reset button is a little thin black button located inside the safe next to the battery compartment. With batteries installed, hold the reset button down for 5 seconds. Keypad will beep twice and flash green twice when ready to enter a new code. Code must be 3-8 button pushes. After entering your custom code, tap (do not hold) the reset button. Keypad will beep twice and the orange light will flash twice if entered correctly. Enter the exact same code again then tap (do not hold) the reset button again. Keypad will beep twice and green light will flash twice if code sequence has been registered successfully. *If the code is 8 button digits long then do not tap the reset button after entering custom code. Keypad will automatically beep twice and the color orange will flash twice after pressing the 8<sup>th</sup> button. Enter 8 button sequence again without tapping the reset button a 2<sup>nd</sup> time to register 8-digit codes.*

**Silencing the keypad:** To turn off the sound, hold down the left button for 5 seconds. Keypad will now be silent but still flash colors when inputting codes. Hold left button again for 5 seconds to turn sound back on.

## **Notes:**

If you made an error while changing your code, just hold down the reset button for 5 seconds and try again.

Keypad will beep 5 times and flash red if the code is entered incorrectly.

Lock out mode: If wrong code is entered 3 times in a row then the safe will go into a 2-minute lock out mode. You must wait for the lockout mode to finish before trying again.

Do not lock your override key inside safe.

Use Duracell batteries for longer life.

Changing the batteries will not delete your saved code.

*Lost your key or need a copy? Have your receipt and a scanned copy of your driver's license ready and contact your local dealer or Hollon Safe Company at 888-455-2337. Additional charges for the key and shipping may apply.*

Need assistance? Call Hollon Safe Tech Support at 888-455-2337